



## 1. Remote Control Names and Parts

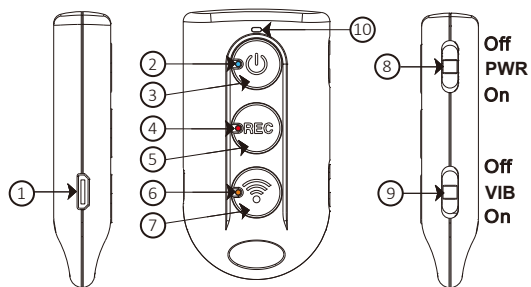


1. USB Port (Charge)
2. DVR Power On LED (Blue)
3. DVR Power On / Off Button
4. DVR Rec LED (Red)
5. DVR Rec On / Off Button
6. DVR Wi-Fi LED (Orange)
7. DVR Wi-Fi On / Off Button
8. Remote Power On (down) / Off (up)
9. Remote Vibration On (down) / Off (up)
10. Remote charge LED (Green) / Remote Command sent LED (Blue)

## 2. Receiver Names and Parts

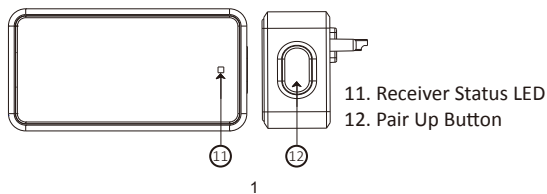


1

## 3. Package Content

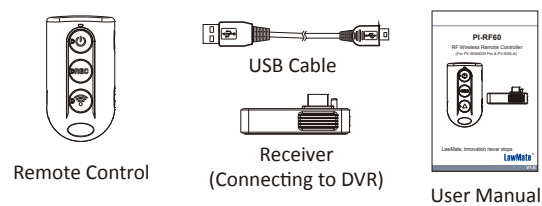

※ PI-RF60 works with PV-500Neo Pro / PV-500L4i only.

## 4. Charging the Remote Control

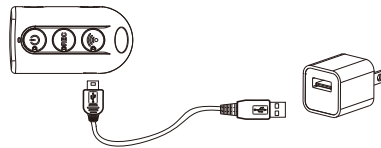


1. Power off the remote control by sliding ⑧ upwards.  
※ It is important to turn off the remote control while charging and make sure it is fully charged everytime before use.
2. Connect the micro USB end to ① on the remote control.
3. Connect the other end of the USB cable to a USB charger, and connect the charger to an AC wall outlet.

2

- ※ Check ⑩ for battery / charging status
  - Solid green ■ - Charging
  - Green LED turns off - Fully charged
  - Blue LED blinking ■ - Battery low
- ※ The standby time of the remote control is approximately 18 hours. Please remember to always turn it off after use.

## 5. Pair up the Remote Control Set with DVR

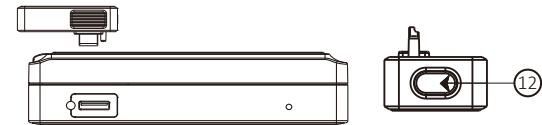

1. Plug the receiver into the control port on a DVR that has power. Blue LED on ⑩ will blink once to indicate the receiver is working.
2. Slide down ⑧ to power on the remote control.
3. Press ⑫ for 3 seconds. Blinking red & blue ⑪ indicates the receiver is waiting to be paired up.
4. Then press either ⑤ or ⑦ once. With the remote control vibrates once and both red & blue ⑪ go off, the remote set are successfully paired up with DVR.

※ Pairing up is a one-time procedure when using it for the first time.

3

## 6. Operation

### 6.1 For Remote Control

#### 6.1.1 Power On / Off

Slide ⑧ downward to power on; upward to power off. When powered on, blue LED on ⑩ and blue & red LED on ⑪ both blink once to show the remote control set is working.

#### 6.1.2 Turn On / Off the Vibration

Slide ⑨ downward to turn on; upward to turn off.

### 6.2 For DVR

#### 6.2.1 Turn On / Off

Long press ③ at least 2 seconds to turn on and off the DVR.

※ Please make sure the DVR is charged.

#### 6.2.2 Recording

Press ⑤ once to start or stop the recording.

#### 6.2.3 Wi-Fi

Press ⑦ once to enable or disable Wi-Fi.

※ When a command is sent from the remote control to the receiver, the blue LED on ⑩ and ⑪ will both blink once as an indication.

## 7. Vibration Indication

The remote vibrates twice - Power on the remote / Power on and off the DVR / Start and stop DVR recording / Turn on and off DVR Wi-Fi

4

## 8. LED Indicators

Receiver	Status
Blinking Blue & Red ⑪	Waiting to be paired up
Blue & Red ⑪ blinks once	Command received

Remote Control	Status
Solid Blue ②	DVR is powered on
Solid Red ④	DVR is recording
Solid Orange ⑥	DVR Wi-Fi on
Blue ⑩ blinks once	Command sent / Remote control working


## 9. Specification

Frequency Range	470MHz-510MHZ
Frequency Shift Keying	FSK/GFSK
Power Supply	Direct 1.8~3.6V
Current Consumption	Tx≤18mA · Rx≤8mA · Standby≤6mA
PI-RF60TX Battery	230mAH · Standby hour: 18-20 Hour
Transmitted Power	0~+20dBm
RX Sensitivity	-115dBm@10Kbps
On-Air Data Rate	2k~250 kbps
Operating Temperature	-35℃~85℃

# PI-RF60

## RF Wireless Remote Controller

(For PV-500HDW Pro & PV-500L4i)

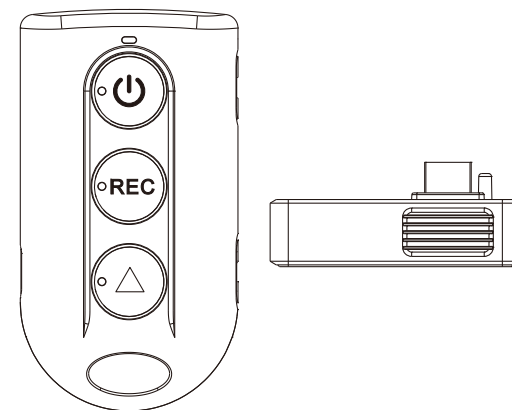

LawMate, innovation never stops

**LawMate**®

V1.0