



1. Remote Control Names and Parts

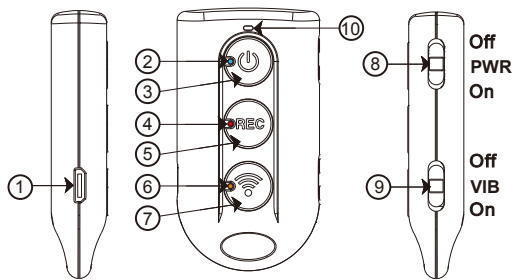


1. USB Port (Charge)
2. DVR Power On LED (Blue)
3. DVR Power On / Off Button
4. DVR Rec LED (Red)
5. DVR Rec On / Off Button
6. DVR Wi-Fi LED (Orange)
7. DVR Wi-Fi On / Off Button
8. Remote Power On (down) / Off (up)
9. Remote Vibration On (down) / Off (up)
10. Remote charge LED (Green) / Remote Command sent LED (Blue)

2. Receiver Names and Parts

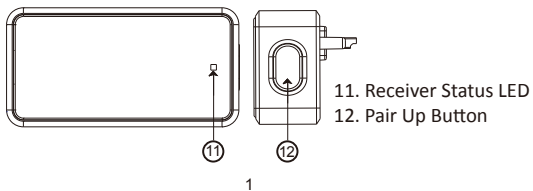


11. Receiver Status LED
12. Pair Up Button

3. Package Content

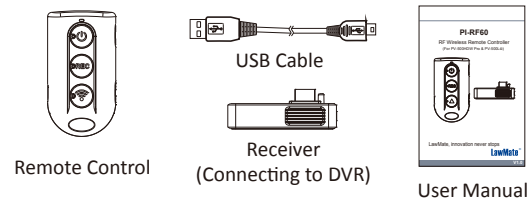

※ PI-RF60 works with PV-500Neo Pro / PV-500L4i only.

4. Charging the Remote Control

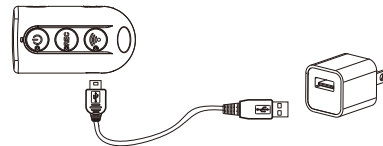


1. Power off the remote control by sliding (8) upwards.
※ It is important to turn off the remote control while charging and make sure it is fully charged everytime before use.
2. Connect the micro USB end to (1) on the remote control.
3. Connect the other end of the USB cable to a USB charger, and connect the charger to an AC wall outlet.

※ Check (10) for battery / charging status

- Solid green ■ - Charging
- Green LED turns off - Fully charged
- Blue LED blinking ■ - Battery low

※ The standby time of the remote control is approximately 18 hours. Please remember to always turn it off after use.

5. Pair up the Remote Control Set with DVR

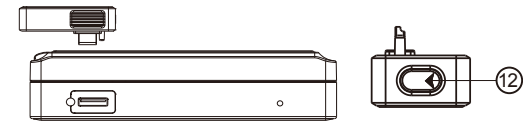

1. Plug the receiver into the control port on a DVR that has power. Blue LED on (10) will blink once to indicate the receiver is working.
2. Slide down (8) to power on the remote control.
3. Press (12) for 3 seconds. Blinking red & blue (11) indicates the receiver is waiting to be paired up.
4. Then press either (5) or (7) once. With the remote control vibrates once and both red & blue (11) go off, the remote set are successfully paired up with DVR.

※ Pairing up is a one-time procedure when using it for the first time.

6. Operation

6.1 For Remote Control

6.1.1 Power On / Off

Slide (8) downward to power on; upward to power off. When powered on, blue LED on (10) and blue & red LED on (11) both blink once to show the remote control set is working.

6.1.2 Turn On / Off the Vibration

Slide (9) downward to turn on; upward to turn off.

6.2 For DVR

6.2.1 Turn On / Off

Long press (3) at least 2 seconds to turn on and off the DVR.

※ Please make sure the DVR is charged.

6.2.2 Recording

Press (5) once to start or stop the recording.

6.2.3 Wi-Fi

Press (7) once to enable or disable Wi-Fi.

※ When a command is sent from the remote control to the receiver, the blue LED on (10) and (11) will both blink once as an indication.

7. Vibration Indication

The remote vibrates twice - Power on the remote / Power on and off the DVR / Start and stop DVR recording / Turn on and off DVR Wi-Fi

8. LED Indicators

Receiver	Status
Blinking Blue & Red (11)	Waiting to be paired up
Blue & Red (11) blinks once	Command received


Remote Control	Status
Solid Blue (2)	DVR is powered on
Solid Red (4)	DVR is recording
Solid Orange (6)	DVR Wi-Fi on
Blue (10) blinks once	Command sent / Remote control working

9. Specification

Frequency Range	470MHz-510MHZ
Frequency Shift Keying	FSK/GFSK
Power Supply	Direct 1.8~3.6V
Current Consumption	Tx≤18mA · Rx≤8mA · Standby≤6mA
PI-RF60TX Battery	230mAH · Standby hour: 18-20 Hour
Transmitted Power	0~+20dBm
RX Sensitivity	-115dBm@10Kbps
On-Air Data Rate	2k~250 kbps
Operating Temperature	-35°C~85°C

* This product is for Law Enforcement and Home Security Use Only!

PI-RF60 RF Wireless Remote Controller (For PV-500HDW Pro & PV-500L4i)

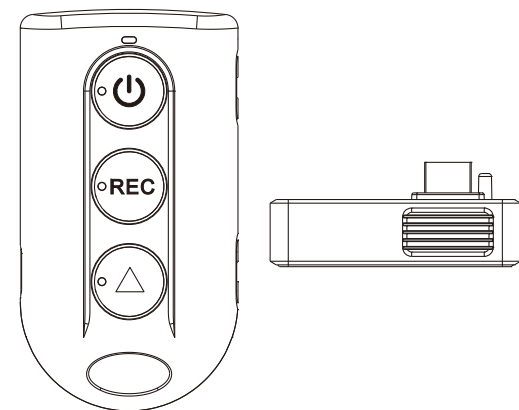

LawMate, innovation never stops

LawMate®