 


8. Format the Memory Card 1. The camera must be connected to the DVR first.	10. Operation		
1. The compare must be connected to the DV/D first	10. Operation	12. Specification	
<ul> <li>2. Insert the memory card into ① as the icon shown on the device.</li> <li>3. With device powered off, press and hold Rec button ① .</li> <li>4. And then press Power button ③ for 3 seconds until you see the blinking red LED.</li> <li>5. Lastly, release both buttons at the same time.</li> <li>Blinking Red LED   + Solid Blue LED   - the memory card is being formatted.</li> <li>All lights go off - the formatting is completed.</li> <li>Caution: To make the memory card recognizable, please be sure to format the memory card before using it for the first time. Please note that formatting on computer is not recommended, for it might result in the failure for the computer to recognize the card.</li> <li>9. Date and Time Setting (For Windows System)</li> <li>1. From the destop right-click to open Notepad, create a text file named settime.txt</li> <li>2. On the first line of file, enter date and time information as year.month.day hours.minutes.seconds. For example, suppose the time is October 16, 2018 15:00. Then enter 2018.10.16 15:00:00</li> <li>** There should be a space left between day and hours, and the time format should be of 24-hour clock.</li> <li>3. Save the file to the root directly of the memory card.</li> <li>4. Insert the memory card into the slot, and power on the device. The date and time setting is now completed.</li> </ul>	<ul> <li>Power on: Press (9) for 3 seconds.</li> <li>Recording: With device powered on, press (10) to start or stop recording.</li> <li>Wi-Fi: With device powered on, press (2) to turn on/off Wi-Fi.</li> <li>Power off: With no ongoing recording, press (2) for 3 seconds.</li> <li>Reset: When the device functions abnormally, press (12).</li> <li>Restore default Wi-Fi password: long press (15) for 4 seconds.</li> <li>Restore default setting: press (15) for 10 seconds.</li> <li>Solid blue LED (1) - power on.</li> <li>Solid red LED (1) - power on.</li> <li>Solid red LED (1) - device is connected to Wi-Fi connection.</li> <li>Solid orange LED (1) - device is connected to Wi-Fi.</li> <li>The device powers off itself when memory card is full.</li> </ul> <b>11 Download Videos and Photos from DVR</b> Knowing that all video files are stored in the memory card, you can process the following steps to download videos. 1. Use a memory card reader to transfer files from the card to the computer. 2. Or, connect the device to a computer with memory card inserted. Turn on the device and it will work as a flash drive.	LCD Algorithm File Format Video Recording Mode Recording Capability Frame Rate Wi-Fi Wi-Fi Protocol Memory Type Data Interface Date/Time Table Date/Time Table Snapshot Power Input Charging Time Battery Input Battery Lifetime	Display           3.0" 960*480 TOUCH TFT           Video Spec.           H.264, JPEG           MOV, JPG           Auto / Manual / Motion Dete           1080P / 720P / WVGA           Up to 30 fps           Wi-Fi Spec.           Built-in Wi-Fi Module (IEEE 80           RTSP           Storage & I/O           Memory Card (Support up to           Mini USB 2.0           Misc.           Stand-By, Power-Off           YYYY.MM.DD, HH,MM,SS           Snapshot image when preview           Power           DCSV           240min (700mA)           DC 3.7V / 2200 mA Lithium Ba           180min (1080P / Wi-Fi OFF / L           220min (720P / Wi-Fi OFF / L           230min (720P / Wi-Fi ON / LC           230min (720P / Wi-Fi OFF / L           200min (720P / Wi-Fi OFF / L           200min (WGA / Wi-Fi OFF / L           200min (WVGA / Wi-Fi OFF / L           200min (WVGA / Wi-Fi OFF / L           200min (WVGA / Wi-Fi OFF / L
should not be visible when you connect the device to the computer again. 5	6	Recording Time	160min @ 1920x1080 resolut <b>7</b>


## 6. Connect the Wired Controller to the DVR



- 1. Plug in the Controller Cable into the Control port ③.
- 2. Turn on the Controller, the device starts recording instantly. When turned off, the recording stops and device powered off.
- 3. To turn on the device, slide the controller toggle downward and hold for 3 seconds.
- 4. To turn off the device, slide the controller toggle downward again and hold for 3 seconds.
- Solid green LED **Solid** on Controller the controller is connected.
- Solid red LED **—** on Controller the device is recording.

## 7. Connect the DVR to the Computer

With the DVR powered off, plug the USB Cable into the USB port (14)on DVR and the other end to the computer.

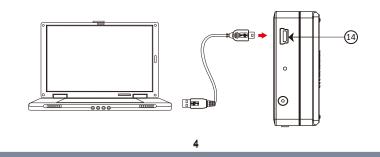

**LawMate** 

V1.1

